





XPico[®] Embedded Device Server Integration Guide

Copyright and Trademark

© 2013 Lantronix, Inc. All rights reserved. No part of the contents of this book may be transmitted or reproduced in any form or by any means without the written permission of Lantronix.

Lantronix®, xPico® and DSTni® are registered trademarks of Lantronix, Inc. in the United States and other countries. DeviceInstaller™ is a trademark of Lantronix, Inc.

Windows® is a registered trademark of Microsoft Corporation. Wi-Fi® is a registered trademark of Wi-Fi Alliance. All other trademarks and trade names are the property of their respective holders.

Contacts

Lantronix, Inc.

167 Technology Drive Irvine, CA 92618, USA Toll Free: 800-526-8766 Phone: 949-453-3990 Fax: 949-453-3995

Technical Support

Online: www.lantronix.com/support

Sales Offices

For a current list of our domestic and international sales offices, go to the Lantronix web site at www.lantronix.com/about/contact

Disclaimer

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules. These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one of the following measures:

- 1. Reorient or relocate the receiving antenna.
- 2. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- 4. Consult the dealer or an experienced radio/TV technician for help.

This device complies with Part 15 of the FCC Rules. Operation is subject to the following two conditions: (1) This device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.

This device is intended only for OEM Integrators. The OEM integrator should be aware of the following important issues.

Labeling of the End Product (xPico Wi-Fi only)

The label on the end product incorporating the xPico Wi-Fi module must clearly state that it contains an FCC-approved RF module. Canada and Japan also require a similar statement.

For example, "This product contains RF transmitter ID # (put FCC, IC, and/or Japan module grant numbers here)." The label must include the ID numbers for the regions where the end product is installed. The grant numbers are below.

xPico Wi-Fi FCC ID number: R68XPICOW

xPico Wi-Fi IC ID number: 3867A-XPICOW

xPico Wi-Fi Japan ID numbers: 201-135275

RSS-GEN Sections 7.1.4 and 7.1.5 Statement for Devices with Detachable Antennas (xPico Wi-Fi only)

This device has been designed to operate with the antennas listed in the Certificate, and having a maximum gain of 2.88 dBi. Antennas not included in this list or having a gain greater than 2.88 dBi are strictly prohibited for use with this device, unless system level FCC approval is gained. The required antenna impedance is 50 ohms.

To reduce potential radio interference to other users, the antenna type and its gain should be so chosen that the equivalent isotropically radiated power (EIRP) is not more than that required for successful communication.

Integration Notes (xPico Wi-Fi):

- This module is authorized under limited module approval specified to mobile host equipment. So, the antenna must be installed such that 20cm is maintained between the antenna and users.
- The transmitter module may not be co-located with any other transmitter or antenna.
- As long as the two conditions above are met, further transmitter testing will not be required. However, the OEM integrator is still responsible for testing their end product for any additional compliance requirements required with this module installed (for example, digital device emission, PC peripheral requirements, etc.)
- In the event that these conditions cannot be met (for example certain laptop configurations, general purpose PCMCIA or similar cards, or co-location with another transmitter) and obtaining a separate FCC authorization will be required, then the FCC authorization is no longer considered valid and the FCC ID cannot be used on the final product (including the transmitter).
- Changes or modifications to this device not explicitly approved by Lantronix will void the user's authority to operate this device.

Note: With the purchase of any xPico family product, the OEM agrees to an OEM firmware license agreement that grants the OEM a non-exclusive, royalty-free firmware license to use and distribute the binary firmware image provided, only to the extent necessary to use the xPico hardware. For further details, please see the xPico OEM firmware license agreement.

Warranty

For details on the Lantronix warranty policy, please go to our Web site at www.lantronix.com/support/warranty.

Revision History

Date	Rev.	Comments
April 2012	Α	Initial release.
September 2012	В	Updated the reference schematic, mounting instructions and compliance information.
January 2013	С	Updated xPico pin-out diagram.
July 2013	D	Updated to include xPico Wi-Fi part information.
August 2013	Е	Updated to include Japanese certification number.

For the latest revision of this product document, please check our online documentation at $\underline{\text{www.lantronix.com/support/documentation}}.$

Table of Contents

	Copyright and Trademark	2
	Contacts	2
	Disclaimer	
	Warranty	3
	Revision History	
	List of Figures	6
	List of Tables	6
1.	Introduction	8
	About the Integration Guide	8
	Additional Documentation	8
2.	Functional Description	10
	xPico Features	11
	xPico Wi-Fi Features	11
	xPico Block Diagram	13
	xPico Wi-Fi Block Diagram	14
	PCB Interface	15
	Mating Connector	19
	Antenna Interface (xPico Wi-Fi Only)	19
	Antenna Placement (xPico Wi-Fi only)	21
	Ethernet Interface (xPico wired only)	21
	Serial Interface	23
	USB Device Port (xPico Wi-Fi only)	24
	LEDs	25
	General Purpose I/O Pins	26
	Reset Pins	26
	Evaluation Board Schematics	27
3.	Mounting Instructions and PCB Footprint	32
	To Access CAD Files	32
	To Install the xPico or xPico Wi-Fi Module	
	Product Information Label	36
4.	•	38
	Electrical Specifications	
	Technical Specifications	40
A:	Compliance (xPico Embedded Device Server)	43
B:	Compliance (xPico Wi-Fi Embedded Device Server)	44

List of Figures

List of

Figure 2-1 xPico and xPico Wi-Fi Dimensions and Views	12
Figure 2-2 xPico Block Diagram	13
Figure 2-3 xPico Wi-Fi Block Diagram	14
Figure 2-4 Reverse-SMA to U.FL(long) (P/N 500-180-R)	20
Figure 2-5 U.FL to U.FL Cable (P/N 500-181-R)	20
Figure 2-6 Reverse-SMA to U.FL(short) (P/N 500-182-R)	20
Figure 2-7 Ethernet Connection Example (xPico wired only)	22
Figure 2-8 Serial Port Example	23
Figure 2-9 USB Device Interface Example (xPico Wi-Fi only)	25
Figure 2-10 Evaluation Board Schematic, Part 1 of 5	27
Figure 2-11 Evaluation Board Schematic, Part 2 of 5	28
Figure 2-12 Evaluation Board Schematic, Part 3 of 5	29
Figure 2-13 Evaluation Board Schematic, Part 4 of 5	30
Figure 2-14 Evaluation Board Schematic, Part 5 of 5	31
Figure 3-1 White Mounting Quick Clip Dimensions	32
Figure 3-2 Aligning Mounting Clip Legs to Standoff Holes	34
Figure 3-3 Mounting Instructions for PEM Standoff	35
Figure 3-4 Hirose Connector Layout	36
Figure 3-5 xPico Product Label	36
Figure 3-6 xPico Wi-Fi Product Label	37
Tables	
Table 1-1 xPico and xPico Wi-Fi Features	
Table 2-1 xPico Part Numbers	
Table 2-2 xPico and xPico Wi-Fi Pin Connections	15
Table 2-3 xPico (wired) PCB Interface Signals	16
Table 2-4 xPico Wi-Fi PCB Interface Signals	17

Table 2-5 xPico Wi-Fi External Antenna Options _______ 20
Table 2-6 Ethernet Interface Signals ______ 21

Table 2-8 xPico and xPico Wi-Fi Serial Port Signals23Table 2-9 RS232 Connections (Serial Transceiver Required)24Table 2-10 RS422/485 Connections (Serial Transceiver Required)24Table 2-11 USB Host Port Signals24Table 2-12 xPico Status LED Output Signals25Table 2-13 xPico Wi-Fi Status LED Output Signals25Table 2-14 Ethernet Interface xPico Serial Port Signals26Table 2-15 xPico Reset Signals26Table 4-1 Absolute Maximum Ratings38

and Combo RJ45/Magnetic Module Connectors ______ 21

Table 2-7 Recommended Magnetic Modules

Table 4-2	xPico Wired Recommended Operating Conditions	38
Table 4-3	xPico WiFi Recommended Operating Conditions	39
Table 4-4	xPico Wired Technical Specification	40
Table 4-5	xPico Wi-Fi Technical Specification	40
Table A-1	Electromagnetic Emissions	43
Table A-2	Electromagnetic Immunity	43
Table B-1	Country Certifications	44
Table B-2	Country Transmitter IDs	44
Table B-3	Safety	44

1. Introduction

About the Integration Guide

This guide provides the information needed to integrate the xPico® family of products into customer-printed circuit boards. This manual is intended for engineers responsible for integrating the xPico into their product.

Note: This document includes support for xPico embedded device server versions XPC100100B-01, XPC100100S-01, XPC100100K-02, XPC10010MB-01 and XPC10010MS-01, and xPico Wi-Fi embedded device server versions XPW100100B-01, XPW100100S-01 and XPW100100K-02.

The sections in chapter 2 provide board schematic and layout recommendations for both xPico (wired) and xPico Wi-Fi products. Some of the sections apply to xPico (wired) only or xPico Wi-Fi only. Signals that are unused for a particular product can be left floating. If the application has the potential to use both components as a stuff option it is recommended to follow the design guide for all of the sections. The table below lists which sections are applicable to the xPico (wired) and xPico Wi-Fi products.

Note: xPico (wired) refers to the Ethernet-only versions of xPico.

Chapter 2 Section xPico (wired) **PCB** Interface Χ Χ Mating Connector Χ X X Antenna Interface Antenna Placement Χ Ethernet Inteface Χ Serial Inteface X X **USB Device Port** X **LEDs** Χ Χ General Purpose IO Pins Χ Χ Reset Pins Χ Χ Reference Schematic Χ

Table 1-1 xPico and xPico Wi-Fi Features

Additional Documentation

Visit the Lantronix Web site at www.lantronix.com/support/documentation for the latest documentation and the following additional documentation.

Document	Description		
xPico Embedded Device Server User Guide	Provides information needed to configure, use, and update the xPico firmware.		
xPico Wi-Fi Embedded Device Server User Guide	Provides information needed to configure, use, and update the xPico Wi-Fi firmware.		
xPico Embedded Device Server Development Kit Quick Start	Provides the steps for getting the xPico up and running.		

Document	Description
xPico Embedded Device Server Development Kit User Guide	Provides a detailed description of the xPico evaluation kit hardware
APS: Modbus Protocol User Guide	Provides detailed information for installing and operating the IAP device server using our Modbus firmware.
DeviceInstaller™ User Guide	Provides instructions for using the Windows-based utility to configure the xPico and other Lantronix device servers.
Com Port Redirector User Guide	Provides information on using the Windows-based utility to create a virtual com port.

2. Functional Description

Designed for quick integration with minimal engineering effort, the chip-sized xPico embedded device server provides simplicity and flexibility making it the easiest and fastest networking-enabling module on the market.

xPico and xPico Wi-Fi are extremely compact networking solution that enables Ethernet or Wireless connectivity on virtually any device with a serial interface. The included industry-proven Lantronix device server application and full IP stack allow seamless remote access to device data simplifying design integration while providing robust connectivity.

As one of the smallest embedded device servers in the world, xPico and xPico Wi-Fi can be utilized in designs typically intended for chip solutions. A key difference with the xPico is that there is virtually no need to write a single line of code, translating to a much lower development cost and faster time-to-market.

Table 2-1 xPico Part Numbers

Part Number	Description
XPC100100B-01	xPico Device Server Module, Extended Temp, AES Encryption, Bulk, RoHS
XPC100100S-01	xPico Device Server Module, Extended Temp, AES Encryption, Sample, RoHS
XPC100100K-02	xPico Device Server Module Development Kit w/ Module, RoHS
XPW100100B-01	xPico Wi-Fi — IEEE 802.11 b/g/n Device Server Module, Extended Temp, Bulk, RoHS
XPW100100S-01	xPico Wi-Fi — IEEE 802.11 b/g/n Device Server Module, Extended Temp, Sample, RoHS
XPW100100K-01	xPico Wi-Fi — IEEE 802.11 b/g/n Device Server Development Kit w/ Module, RoHS
XPC10010MB-01	xPico IAP Device Server Module, Extended Temperature, Modbus, RoHS, Bulk
XPC10010MS-01	xPico IAP Device Server Module, Extended Temperature, Modbus, RoHS, Sample

xPico Features

The xPico device server contains Lantronix's own DSTni® EX controller, with 256 KBytes of SRAM, 16 KBytes of boot ROM, and integrated 10/100 PHY.

The xPico also contains the following:

- 3.3-volt serial interface
- 8 Configurable I/O pins
- All logic level I/O pins are 5V input tolerant
- 4-Mbit flash memory
- Power supply filters
- Reset circuit
- +1.8V regulator

Note: xPico does not contain integrated Ethernet magnetics. An external Ethernet magnetic module and RJ45 Jack is required to interface to a standard 10/100Mbps Ethernet network.

The xPico requires +3.3-volt power and is designed to operate in an extended temperature range (see technical data).

xPico Wi-Fi Features

The xPico Wi-Fi contains Cortex M3 ARM processor with 128KByte of SRAM and 1MByte of embedded Flash memory. The unit also includes an 802.11 b/g/n WLAN radio with a U.FL port for connection to an external antenna.

The xPico Wi-Fi also contains the following:

- 3.3-volt serial interface
- 8 Configurable I/O pins
- ♦ All logic level I/O pins are 5V input tolerant
- 8-Mbit flash memory (in addition to the 1MByte CPU embedded Flash)
- Power supply filters
- Reset circuit

Note: xPico Wi-Fi does not contain an integrated antenna. An external antenna is required for connection to a WLAN network.

The xPico Wi-Fi requires +3.3-volt power and is designed to operate in an extended temperature range (see technical data).

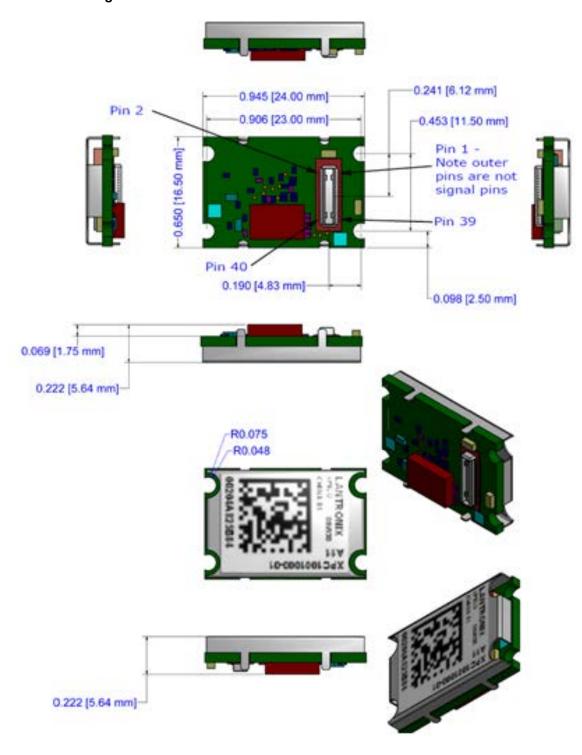


Figure 2-1 xPico and xPico Wi-Fi Dimensions and Views

xPico Block Diagram

The following drawing is a block diagram of the xPico showing the relationships of the components.

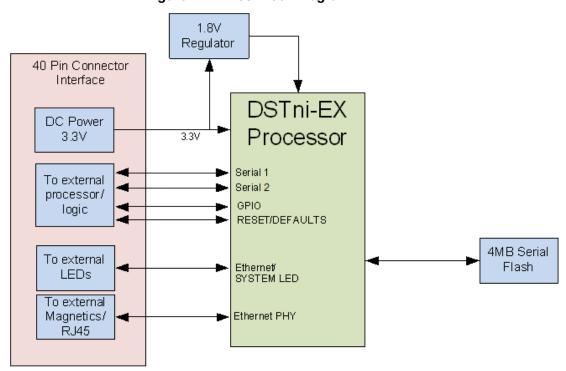


Figure 2-2 xPico Block Diagram

xPico Wi-Fi Block Diagram

The following drawing is a block diagram of the xPico Wi-Fi showing the relationships of the components.

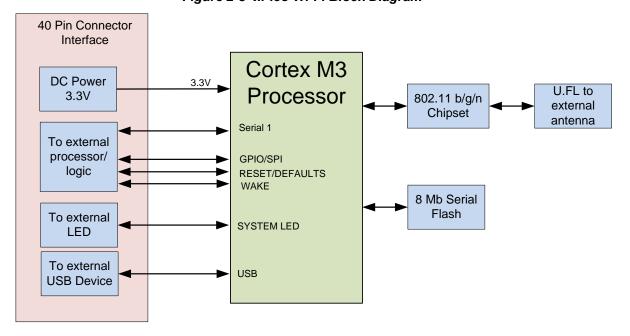


Figure 2-3 xPico Wi-Fi Block Diagram

PCB Interface

The xPico has a serial interface compatible with data rates up to 921,600 bps (in high-performance mode). The serial signals (RX, TX, RTS, CTS, and all CPs) are 3.3V CMOS logic level and 5V tolerant. The serial interface pins include +3.3V, ground, and reset. The serial signals usually connect to an internal device, such as a UART. For applications requiring an external cable running with RS-232 or RS422/485 voltage levels, the xPico must interface to a serial transceiver chip. All configurable I/O pins are 3.3V CMOS logic level and 5V input tolerant. xPico requires a mating connector. Customers should layout their PCB for Hirose part number DF40C(2.0)-40DS-0.4V(51).

An external Ethernet magnetic module and RJ45 is required to interface xPico to a standard 10/100Mbps Ethernet network.

An external antenna attached to the xPico Wi-Fi U.FL connector is required to connect to an 802.11b/g/n wireless network.

Shown below is the xPico pin connection diagram highlighting the differences between the xPico and xPico Wi-Fi.

Pin#	xPico Wired	xPico Wi-Fi	Pin#	xPico Wired	xPico Wi-Fi
1	GND	GND	2	GND	GND
3	CP8	CP8/SPI_CS	4	LED1/LINK	LED1/WLAN_LED
5	RTS1	RTS1	6	LED0/SPEED	NC
7	RXD1	RXD1	8	LED2/ACTIVITY	NC
9	GND	GND	10	TXD1	TXD1
11	ETX-	NC	12	ETCT	NC
13	ETX+	NC	14	LED3/DUPLEX(OUT)	WKUP (IN)
15	GND	GND	16	CTS1	CTS1
17	ERX-	NC	18	ERCT	NC
19	ERX+	NC	20	SYS_LED	SYS_LED
21	GND	GND	22	Reserved	DDP
23	RXD2	RXD2	24	Reserved	DDM
25	TXD2	TXD2	26	CP2/INT	CP2/SPI_INT
27	CP7	CP7/SPI_SCK	28	CP3	CP3/MISO
29	+3.3V	+3.3V	30	CP4	CP4/MOSI
31	+3.3V	+3.3V	32	CP5	CP5
33	+3.3V	+3.3V	34	CP6	CP6
35	CP1	CP1	36	DEFAULT#(IN)	DEFAULT#(IN)
37	GND	GND	38	EXT_RESET#(IN)	EXT_RESET#(IN)
39	GND	GND	40	GND	GND

Table 2-2 xPico and xPico Wi-Fi Pin Connections

Table 2-3 xPico (wired) PCB Interface Signals

Signal Name	xPico Pin #	Primary Function	Reset State	Internal Pull-up	Driver Strength
GND	1	Signal Ground			
GND	2	Signal Ground			
CP8	3	Configurable I/O	Input	Active 56K to 122K	4mA
LED1/LINK	4	Ethernet Link LED, active low	Output		8mA
RTS1	5	Serial ready to send/ serial transmit enable	Output		2mA
LED0/SPEED	6	Ethernet speed LED, active low	Output		8mA
RXD1	7	Serial receive data input 1	Input	Active 56K to 122K	
LED2/ACTIVITY	8	Ethernet Activity LED, active low	Output		8mA
GND	9	Signal Ground			
TXD1	10	Serial transmit data output 1	Output		2mA
TX-	11	Ethernet transmit differential (neg)	Output		
тст	12	Ethernet transmit center tap			
TX+	13	Ethernet transmit differential (pos)	Output		
LED3/DUPLEX	14	Ethernet Duplex LED, active low	Output		8mA
GND	15	Signal Ground			
CTS1	16	Serial Clear to Send	Input	Active 56K to 122K	
RX-	17	Ethernet receive differential (neg)	Input		
RCT	18	Ethernet receive center tap			
RX+	19	Ethernet receive differential (pos)	Input		
SYSTEM_LED	20	System status LED, active high	Input	Active 56K to 122K	4mA
GND	21	Signal Ground			
Reserved	22	Reserved for future use. Do not connect.			
RXD2	23	Serial receive data input 2	Input	Active 56K to 122K	
Reserved	24	Reserved for future use. Do not connect.			
TXD2	25	Serial transmit data output 2	Output		2mA
CP2/INT	26	Configurable I/O-External interrupt input	Input	Active 56K to 122K	4mA

Signal Name	xPico Pin#	Primary Function	Reset State	Internal Pull-up	Driver Strength
CP7	27	Configurable I/O	Input	Active 56K to 122K	4mA
CP3	28	Configurable I/O	Input	Active 56K to 122K	4mA
3V3	29	3.3V Input Power			
CP4	30	Configurable I/O	Input	Active 56K to 122K	4mA
3V3	31	3.3V Input Power			
CP5	32	Configurable I/O	Input	10K	4mA
3V3	33	3.3V Input Power			
CP6	34	Configurable I/O	Input	10K	4mA
CP1	35	Configurable I/O	Input	Active 56K to 122K	4mA
DEFAULT#	36	Unit reset to default, active low. Drive low to reset unit to default settings.	Input	Active 56K to 122K	
GND	37	Signal Ground			
EXT_RESET#	38	Unit hardware reset, active low. Drive low to reboot unit.	Input	10K	
GND	39	Signal Ground			
GND	40	Signal Ground			

Table 2-4 xPico Wi-Fi PCB Interface Signals

Signal Name	xPico Pin #	Primary Function	Reset State	Internal Pull-up /Pull- down	Driver Strength
GND	1	Signal Ground			
GND	2	Signal Ground			
CP8/SPI_CS ¹	3	Configurable I/O/ SPI Chip Select	Input, floating	30K to 50K	8mA
LED1/WLAN_LED	4	WLAN Link, active low	Input, floating	30K to 50K	8mA
RTS1	5	Serial ready to send/ serial transmit enable	Input, floating	30K to 50K	8mA
NC	6	No Connect			
RXD1	7	Serial receive data input 1	Input, floating	30K to 50K	
NC	8	No Connect			
GND	9	Signal Ground			
TXD1	10	Serial transmit data output 1	Input,	30K to 50K	8mA

Signal Name	xPico Pin #	Primary Function	Reset State	Internal Pull-up /Pull-	Driver Strength
				down	
			floating		
NC	11	No Connect			
NC	12	No Connect			
NC	13	No Connect			
WKUP⁴	14	System Wake Up on Rising Edge	Input, floating	30K to 50K	
GND	15	Signal Ground			
CTS1	16	Serial Clear to Send	Input, floating	30K to 50K	
NC	17	No Connect			
NC	18	No Connect			
NC	19	No Connect			
SYSTEM_LED	20	System status LED, active high	Input, floating	30K to 50K	8mA
GND	21	Signal Ground			
DDP ²	22	USB (positive)			
RXD2	23	Serial receive data input 2	Input, floating	30K to 50K	
DDM ²	24	USB Negative			
TXD2	25	Serial transmit data output 2	Input, floating	30K to 50K	8mA
CP2/INT ¹	26	Configurable I/O-External interrupt input	Input, floating	30K to 50K	8mA
CP7/SPI_SCK ¹	27	Configurable I/O/ SPI Clock	Input, floating	30K to 50K	8mA
CP3/MISO ¹	28	Configurable I/O/SPI Master In-Slave Out	Input, floating	30K to 50K	8mA
3V3	29	3.3V Input Power			
CP4/MOSI ¹	30	Configurable I/O/ SPI Master Out-Slave In	Input, floating	30K to 50K	8mA
3V3	31	3.3V Input Power			
CP5	32	Configurable I/O	Input, floating	30K to 50K	8mA
3V3	33	3.3V Input Power			
CP6	34	Configurable I/O	Input, floating	30K to 50K	8mA
CP1	35	Configurable I/O	Input, floating	30K to 50K	8mA
DEFAULT#	36	Unit reset to default, active low. Drive low to reset unit to	Input, floating	30K to 50K	

Signal Name	xPico Pin #	Primary Function	Reset State	Internal Pull-up /Pull- down	Driver Strength
		default settings.			
GND	37	Signal Ground			
EXT_RESET#	38	Unit hardware reset, active low. Drive low to reboot unit.	Input	30K to 50K	
GND	39	Signal Ground			
GND	40	Signal Ground			

Note1: The xPico Wi-Fi SPI interface can be master or slave.

Note2: The xPico Wi-Fi USB interface is USB2.0 Full Speed Host/Device/OTG capable. Host/Device/OTG interface connectors and power interface must be designed into the mating board.

Note3. xPico and xPico Wi-Fi may be designed into the same socket. Signals listed as no connect on xPico Wi-Fi may be connected on an xPico base design board. For example, xPico Wi-Fi pins 11, 12, 13, 17, 18, and 19 may connect to an Ethernet magnetic module as designed for xPico (wired), however, Ethernet will not be available on those pins for xPico Wi-Fi.

Note 4. Pin 14 is the Ethernet duplex LED output on xPico (wired) and the system wakeup input on xPico Wi-Fi. For board designs supporting both xPico (wired) and xPico Wi-Fi, a zero ohm resistor stuff option should be used to disconnect any on-board logic driving pin 14 when xPico (wired) is installed.

Note 5. The CP pins can be configured as pull-up or pull-down. The WKUP pin is not configurable and is always pull-down.

Note 6. The IO pins on xPico Wi-Fi are configured as floating-input on reset until configured by firmware. For applications requiring a high signal on power up, an external pull-up may be required.

Mating Connector

The mating connector for the xPico and xPico Wi-Fi module is Hirose part number DF40C (2.0)-40DS-0.4V (51). Special care must be taken when mating and unmating the module to the mating connector. Refer to the Hirose DF40 data sheet below for proper connector mating and unmating, along with the proper connector footprint.

Mating connector data sheet: http://www.hirose.co.jp/cataloge_hp/e68440018.pdf

Antenna Interface (xPico Wi-Fi Only)

The xPico Wi-Fi module has been certified using the external antennas listed below. Per FCC guidelines, the xPico Wi-Fi certification remains valid if using an antenna of similar type to the antennas below. If using an antenna of similar type to one of the antennas below, but from a different manufacturer part number the antenna gain must be equal to or less than specified in the table. Consult with your certification lab for more details.

Table 2-5 xPico Wi-Fi External Antenna Options

Antenna Type	Peak Gain Typical	Lantronix Part Number	Vendor	Vendor Part Number
PCB Strip Antenna with cable to U.FL connector	1.5 to 2.5dBi, 2.39 Ghz to 2.49 Ghz	930-099-R	Ethertronics	1000668
Swivel type antenna, with RP-SMA(M) connector	2 dBi, 2.4 Ghz to 2.5 Ghz, 2 dBi, 5.15 Ghz to 5.85 Ghz	930-033-R	Wanshih	WSS002

Lantronix provides a U.FL to Reverse SMA antenna cable in with the evaluation board and sample kits for development work. These cables can be purchased from Lantronix for production or supplied by an RF cable manufacturer. External antennas can be purchased from the antenna vendor. Components for cable design should be selected for low loss over the entire 2.4Ghz to 5.9Ghz signal range. The cable target impedence should be 50 ohms.

Figure 2-4 Reverse-SMA to U.FL(long) (P/N 500-180-R)

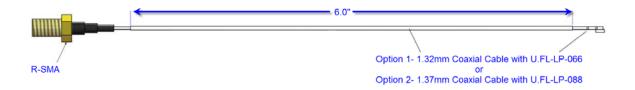


Figure 2-5 U.FL to U.FL Cable (P/N 500-181-R)


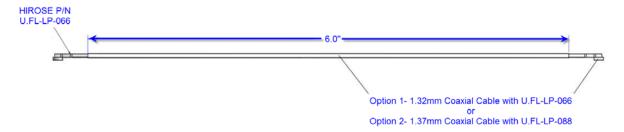


Figure 2-6 Reverse-SMA to U.FL(short) (P/N 500-182-R)

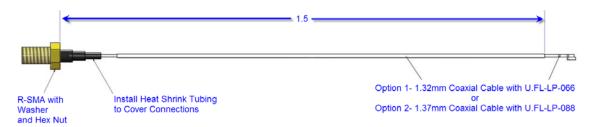

Antenna Placement (xPico Wi-Fi only)

When designing the xPico Wi-Fi module to a mating board, it is important to consider the final installation of the unit and its location with respect to connecting access points. The antenna should be placed so that it has as clear as possible path to the connecting access point for maximum range. Avoid placing the antenna such that it is blocked by metal walls or ground planes of adjacent circuit boards.

Ethernet Interface (xPico wired only)

xPico integrates an internal 10/100Mbps Ethernet MAC and PHY. An external magnetic module and RJ45 is required in order to connect to a standard 10/100Mbps Ethernet network.

Contact **Signal Requirement** DIR **Primary Function** TX+ Out 13 Differential Ethernet 100 ohm differential with transmit data + TX-Out 11 Differential Ethernet 100 ohm differential with transmit data -TX+ RX+ In 19 Differential Ethernet 100 ohm differential with receive data + RX-RX-In 17 Differential Ethernet 100 ohm differential with receive data -RX+ TCT Route > 20 mil width 12 Ethernet transmit center tap connection **RCT** 18 Ethernet receive center tap Route > 20 mil width connection

Table 2-6 Ethernet Interface Signals

The xPico provides a 10/100 Mbps Ethernet interface for connection to an external network through external magnetics and an external RJ45. The table below lists several magnetic modules and combination RJ45/magnetic jacks that can be used with xPico.

Table 2-7 Recommended Magnetic Modules	
and Combo RJ45/Magnetic Module Connectors	;

Туре	Manufacturer	Part Number
Magnetic only (requires RJ45)	BI-Tech	HS91-011-80LFTR
Magnetic only (requires RJ45)	Mingtek	HN0013SG
Combination RJ45/Magnetic	Belfuse	08B0-1D1T-06-F
Combination RJ45/Magnetic	Midcom	MIC2411D-0117T-LF3
Magnetic for POE	PULSE	HX2019

The Ethernet differential pair signals, ERX-/ERX+ and ETX-/ETX+ should be routed as 100-ohm differential pairs on a layer next to the signal ground plane. The use of vias on these signals should be minimized. The center tap signal connections between the magnetic and xPico (wired) module are required. Center tap signals RCT and TCT should be routed with at least 20 mil trace thickness. The area between the magnetic module and RJ45 jack, including the area under both, should be voided of all signals and

planes, except for the signals connecting to both. The signals connecting between the RJ45 and magnetic are required to be isolated by 1500Vrms from all other signals and planes, including chassis and signal ground. The connector shield should be connected to chassis. It is recommended that 1206 resistor pads from chassis ground to signal ground be placed next to each of the shield tabs. The resistor pads allow for 0 ohm jumper, ferrite beads, or decoupling caps to be installed as needed for EMI/EMC improvement.

The Ethernet LED signals should be routed to discrete LEDs or to the LED pins on the RJ45 through 220 ohm or larger resistors. The LED signals are active low. The Ethernet LED signals should be isolated from the signals that connect between the RJ45 and magnetic module.

Also shown in the reference schematic is a recommended TVS array that can be used to improve ESD and EFT in harsh environments. The device shown is Semtec RClamp0502A. This device features route through pin assignments allowing for the Ethernet differential signal pairs to be routed without altering the trace impedance or adding vias. Due to this routing, the device could be installed or depopulated as needed.

See the Lantronix app note, *How to Connect a Lantronix Embedded Module to a Wired Ethernet Port* for more details on Ethernet connection and routing, http://www.lantronix.com/pdf/appnotes/Connect-LTRX-Embed-Module-to-Wired-Ethernet AN.pdf.

The xPico module can also be powered from POE using a POE magnetic and POE powered device controller. Lantronix uses the Silabs, Si3402 POE controller to power the xPico development board via POE. If using POE the Ethernet magnetic module should be changed to a POE compatible module such as Pulse HX2019.

Refer to the evaluation board schematic in the xPico-DevKit_UG for an example circuit. http://www.lantronix.com/pdf/xPico-DevKit_UG.pdf.

Refer to the SiLabs data sheet for Si3402 for more information on using the SiLabs POE controller.

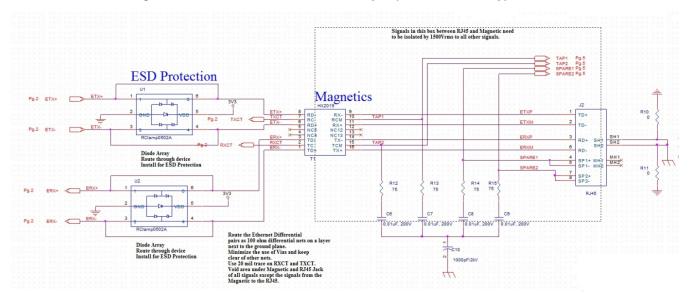


Figure 2-7 Ethernet Connection Example (xPico wired only)

Serial Interface

The xPico and xPico Wi-Fi have two external serial interfaces. The signal levels on the serial interface are 3.3V logic level with 5V tolerant inputs. The serial interfaces require an external transceiver in order to connect to external RS232, RS485, or RS422 networks. The signals of Serial Port 1 may be connected as shown in the reference schematic, *Figure 2-8 Serial Port Example*, below. The transceiver shown in the reference schematic is of type Exar, part number SP336. This transceiver is a multiprotocol RS232, RS485, RS422 transceiver. Single protocol transceivers may be used as required. The xPico interface may also be directly connected to the UART interface of an external CPU. Serial Port 2 is a three wire interface only. It operates like Serial Port 1, except it does not support hardware Flow Control (i.e. no RTS/CTS) and modem control (i.e. no DTR/DCD).

Reset State Description Pin TXD1 Serial Transmit Data output 10 Output RTS1 5 Serial Ready-to-Send / Serial Transmit enable Output RXD1 Serial Receive Data input 7 Input CTS1 Serial Clear-to-Send 16 Input TXD2 Serial Transmit Data output 2 25 Output RXD2 Serial Receive Data input 2 23 Input

Table 2-8 xPico and xPico Wi-Fi Serial Port Signals



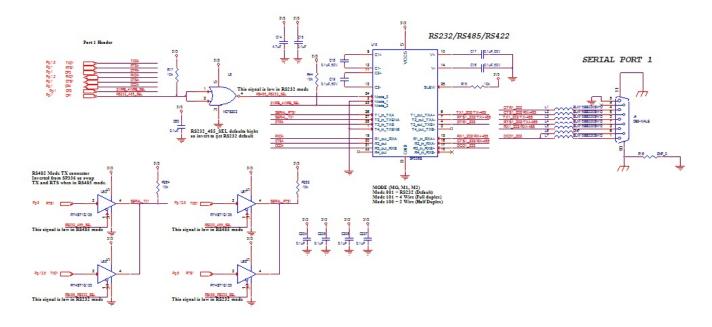


Table 2-9 RS232 Connections (Serial Transceiver Required)

xPico Signal		DCE	DCE Connector		DTE Connector			
Signal	Description	DB9	DB25	Signal	DB9	DB25	Signal	
(Logic)	·							
RXDx	Data In	2	3	RXDx	3	2	TXDx	
TXDx	Data Out	3	2	TXDx	2	3	RXDx	
RTSx	H/W Flow Control Output	7	4	RTSx	8	5	CTSx	
CTSx	H/W Flow Control Input	8	5	CTSx	7	4	RTSx	
CPx	Modem Control Input	1	8	DCDx	4	20	DTRx	
СРу	Modem Control Output	4	20	DTRx	1	8	DCDx	

Table 2-10 RS422/485 Connections (Serial Transceiver Required)

xPico Signal (logic)	Description	RS485 Signal	DB25 4 Wire	DB25 2 Wire	DB9 4 wire	DB9 2 wire
TXDx	Data Out	TX+485	14	14	7	7
TXDx	Data Out	TX-485	15	15	3	3
RXDx	Data In	RX+485	21	14	2	7
RXDx	Data In	RX-485	22	15	8	3
RTSx	TX Enable					
CPx	RS485 Select					
СРу	RS485 2-wire					

Note: The IO pins for xPico Wi-Fi are set to floating input on power up until configured by unit firmware. An external 100K ohm pull-up may be required on the serial transmit signal to prevent downstream UART devices from detecting false characters on initial power up.

USB Device Port (xPico Wi-Fi only)

The xPico Wi-Fi has one USB2.0 Full Speed Device port interfaces for connection to an upstream USB device. The port consists of a differential pair, signals DDP and DDM. These signals should be routed as a 90 ohm differential pair on a signal layer next to the signal ground plane. The use of vias should be minimized on these signals. The USB signals can be connected to a USB Mini Type B USB port (as shown in *Table 2-12*) directly to an IC with a USB host port. If connecting to an external port that is user accessible it is recommended to add a TVS diode array to the signal nets for ESD protection. The ESD array shown in the figure is of type Semtech RClamp0502A. This device features through pin routing to minimize trace impedance changes and simplify routing. The footprint for the TVS array can be added to the PCB and the part can be depopulated if it is not needed. It is recommended that the power drawn off the USB Mini Type B connector be limited to less than 500mA per USB requirements. If the USB device port is unused the DDP and DDM pins may be left unconnected.

Table 2-11 USB Host Port Signals

Pin Name	Description	Connector Pins		Mini Type B USB Device connector pin
DDP	USB Device Port Positive pin	22	Route as 90 ohm differential pair with DDM signal	3

Pin Name	Description	Connector Pins	Signal Requirement	Mini Type B USB Device connector pin
DDM	USB Device Port Negative pin	24	Route as 90 ohm differential pair with DDP signal	2
5V	5V power from USB cable		Current limit to 500 mA per port	1
Ground	Signal Ground	Ground	Ground plane	5

VUSB_DEV F2 500 mA CONN_USB_MINI U21 1 TP156 SH4 X DDM **VBUS** SH3 D-D+ MH2 R52 NC DNP_0 SH2 SH1 GND RClamp0502A C59 0.1uF Diode Array Route through device Install for ESD Protection

Figure 2-9 USB Device Interface Example (xPico Wi-Fi only)

LEDs

The xPico contains several external signals that are intended to drive external status LEDs. The LEDs are listed below. The signals may be connected as shown in the reference schematic figure below.

Table 2-12 xPico Status LED Output Signals

Signal	Pin	Description
LED1/WI-FI LED	4	WI-FI Status LED, active low
SYSTEM_LED	20	System status LED, active high

Table 2-13 xPico Wi-Fi Status LED Output Signals

Signal	Pin	Description	
LED0/SPEED	6	Ethernet speed LED, active low	
LED1/LINK	4	Ethernet Link LED, active low	
LED2/ACTIVITY	8	Ethernet Activity LED, active low	
LED3/DUPLEX	14	Ethernet Duplex LED, active low	
SYSTEM_LED	20	System status LED, active high	

General Purpose I/O Pins

xPico and xPico Wi-Fi contains eight pins which may be used as configurable inputs or outputs. Listed below are the configurable I/O pins. These pins are 3.3V CMOS logic level and 5V input tolerant.

Table 2-14 Ethernet Interface xPico Serial Port Signals

Signal	Pin	Description xPico Wired	Description xPico Wi-Fi	Reset State
CP1	35	Configurable I/O	Configurable I/O	Input
CP2/INT	26	Configurable I/O-External interrupt input	Configurable I/O-SPI interrupt input	Input
CP3	28	Configurable I/O	Configurable I/O- SPI MISO	Input
CP4	30	Configurable I/O	Configurable I/O-SPI MOSI	Input
CP5	32	Configurable I/O	Configurable I/O	Input
CP6	34	Configurable I/O	Configurable I/O	Input
CP7	27	Configurable I/O	Configurable I/O-SPI Clock	Input
CP8	3	Configurable I/O	Configurable I/O-SPI Chip Select	Input

Note 1. For xPico Wi-Fi 5V tolerant pins, in order to sustain a voltage higher than Vcc+0.3, the internal pull-up/pull-down resistors must be disabled.

Reset Pins

xPico and xPico Wi-Fi have two signals for use as reset signals. Signal EXT_RESET# is a hardware controlled input signal that will reboot the xPico processor when asserted low. Signal DEFAULT# is polled by the xPico software. When DEFAULT# is asserted low for six seconds, the unit will reset the system to the default manufacturing settings and reboot the unit. xPico Wi-Fi has an additional signal on pin 14 that can be used to wake up the unit processor when the unit is in a sleep or power down state.

Table 2-15 xPico Reset Signals

Signal	Pin	Description	Reset State	Internal pull-up
EXT_RESET#	38	Unit hardware reset, active low. Drive low to reboot unit.	Input	10K (xPico) 40K (xPico Wi-Fi)
DEFAULT#	36	Unit reset to default, active low. Drive low to reset unit to default settings.	Input	Active 56K to 122K (xPico) 40K (xPico Wi-Fi)
WAKE (xPico Wi-Fi only)	14	Toggle signal from low to high to WAKE from SLEEP or Power down state	Input	40K

Evaluation Board Schematics

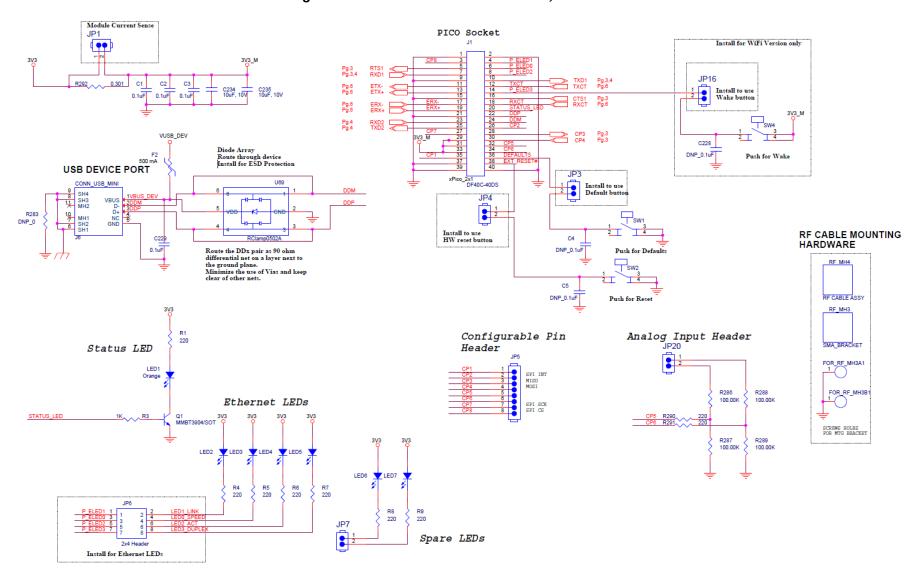


Figure 2-10 Evaluation Board Schematic, Part 1 of 5

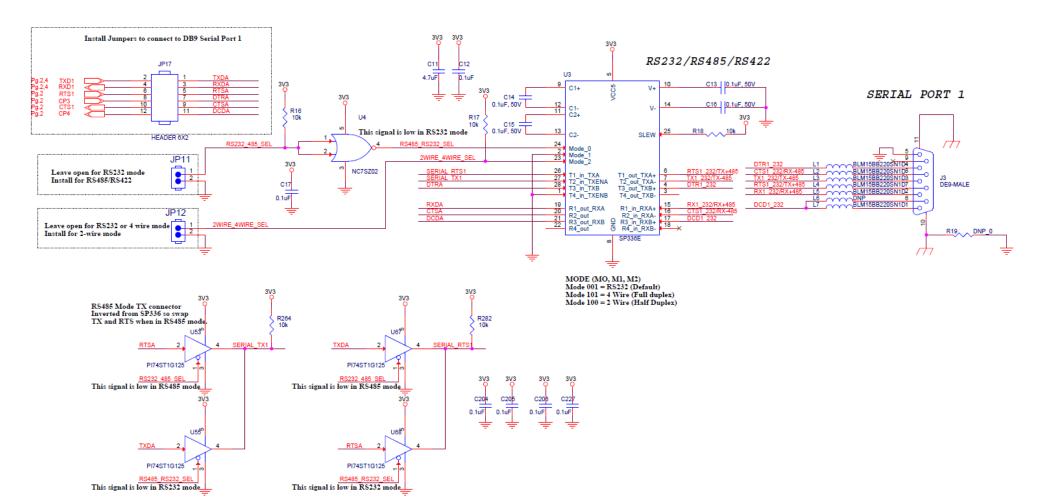


Figure 2-11 Evaluation Board Schematic, Part 2 of 5

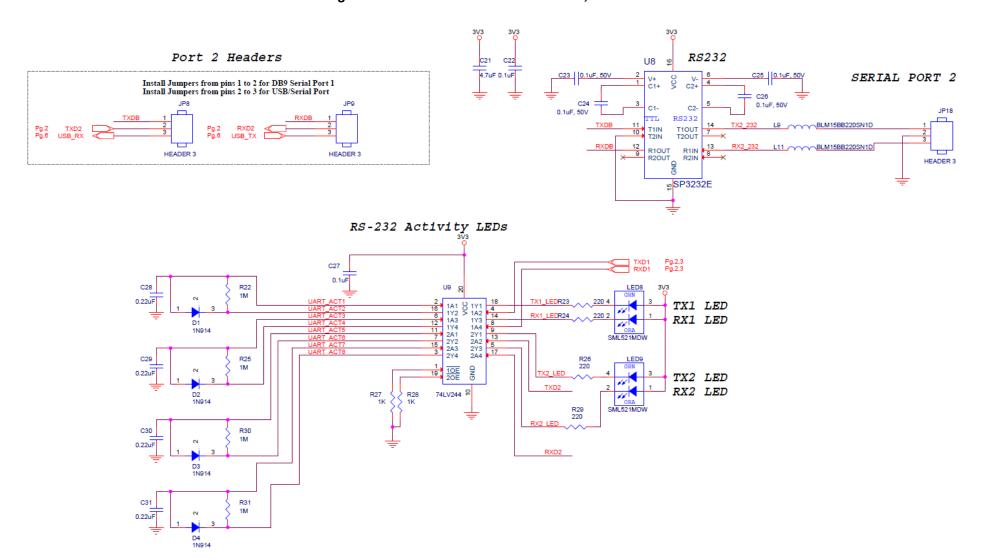


Figure 2-12 Evaluation Board Schematic, Part 3 of 5

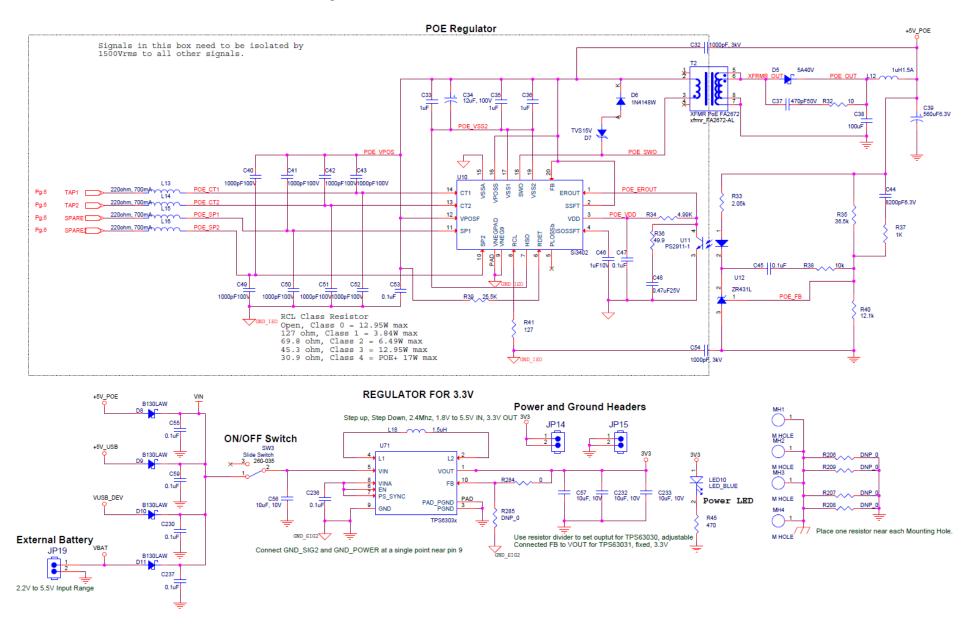


Figure 2-13 Evaluation Board Schematic, Part 4 of 5

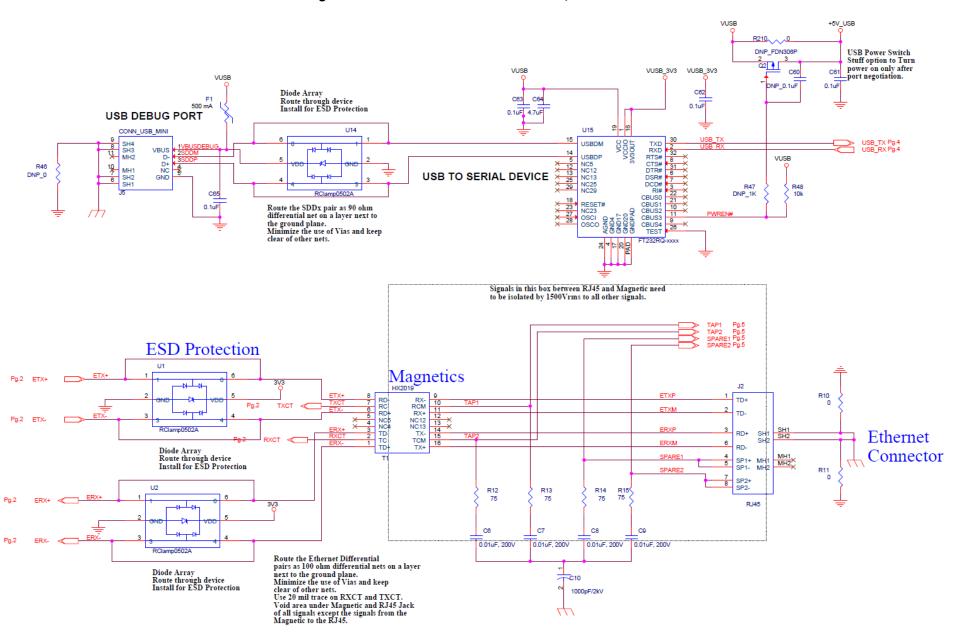


Figure 2-14 Evaluation Board Schematic, Part 5 of 5

3. Mounting Instructions and PCB Footprint

The xPico embedded device server dimensions and mounting instructions are shown in the following drawings below. You may also directly access the CAD files through the Lantronix website.

Note: The mounting instructions in this section are applicable to both the xPico and the xPico Wi-Fi Embedded Device Servers though the xPico pictures below are used to demonstrate installation.

For temperature environments up to +85° Celsius, it is recommended that the mating PCB have its outer layers flooded with signal ground and a heat pad be placed between the module and mating PCB. The recommended heat pad is Lantronix part number XPC100A002-01-B. The ground flooding and heat pad are only required for xPico Wi-Fi in environments above +70°C. For environments below +70°C the heat pad and ground flooding are not required.

To Access CAD Files

- 1. Go to http://www.lantronix.com/products/cad-visio.html.
- 2. Click Download CAD files here to access the Registration Form.

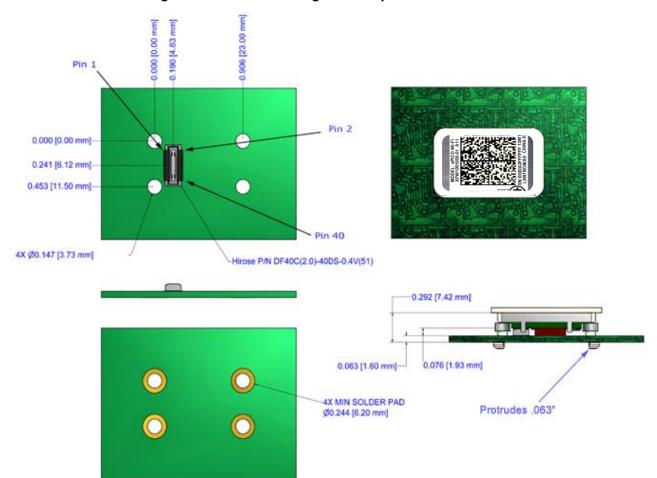


Figure 3-1 White Mounting Quick Clip Dimensions

To Install the xPico or xPico Wi-Fi Module

In the xPico Development Kit (Part Number XPC100100K-02) and xPico Wi-Fi Development Kit (XPW100100K-01), the xPico module comes installed to the xPico Evaluation Board via the connector J1 (Hirose component). If ordered separately, you may need to install it by following the directions below. The included white Mounting Quick Clip is used to align and fasten the module to the evaluation board.

1. Place the module into the white mounting clip, lining up the clip legs and the four module grooves so that the module is seated inside the white clip. For xPico Wi-Fi connect the RF cable to the module U.FL connector prior to installing the Quick Clip.



2. Push the legs of the white clip inward to secure the module to the clip.



- 3. Flip over the module/mounting clip combination so that the product label displays on top and the white mounting clip legs are pointed downward.
- 4. For XPico Wi-Fi high temperature operation, above +70C, it is recommended to place a heat pad between the module and the adjacent PCB. The recommended heat pad is Lantronix part number XPC100A002-01-B (available in a 50 piece bulk pack).
- 5. Place the module/mounting clip combination so that the four mounting clip legs align with the four standoff holes on the board surrounding the J1 connector (see *Figure 3-2*). Make sure to properly orientate the module/mounting clip combination on the board, so that the J1 connector/Hirose component is properly aligned.

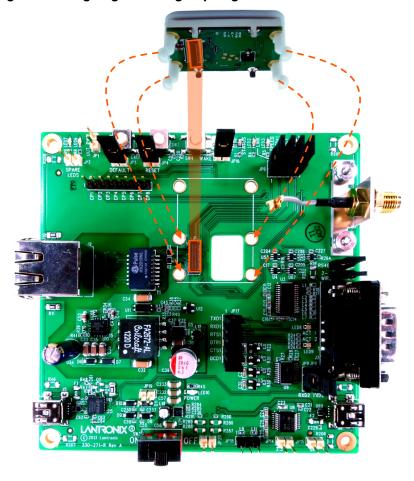


Figure 3-2 Aligning Mounting Clip Legs to Standoff Holes

6. Insert the white clip legs furthest from the J1 connector first and gently push down on the xPico module above the J1 connector. Keep the module as level as possible during installation.



Note: When removing the xPico from the evaluation board, gently tug the module. Do not use excessive force or attempt to remove the xPico module by grasping and pulling the module from the short end opposite the module connector as this may cause damage to the J1 evaluation board connector.


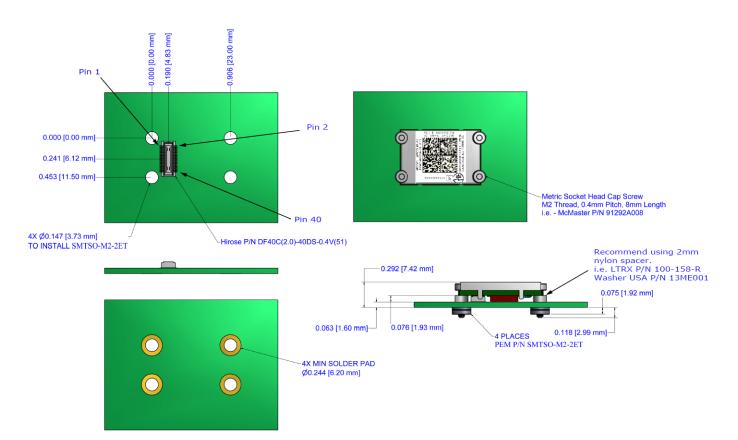


Figure 3-3 Mounting Instructions for PEM Standoff

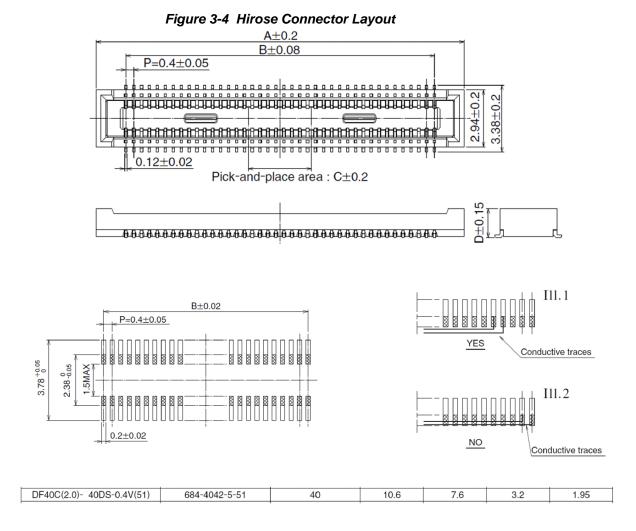

Product Information Label

The product information label contains important information about your specific unit, such as its part number, revision, manufacturing date code, product model, country of origin, datamatrix barcode and MAC address.

Figure 3-5 xPico Product Label

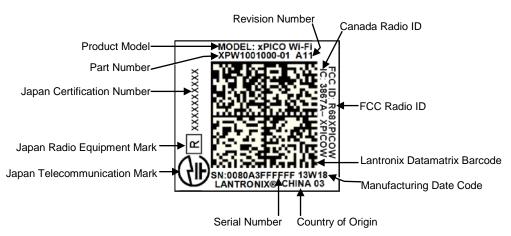


Figure 3-6 xPico Wi-Fi Product Label

4. Specifications

Electrical Specifications

<u>Caution:</u> Stressing the device above the rating listed in this table may cause permanent damage to the xPico embedded device server. Exposure to Absolute Maximum Rating conditions for extended periods may affect the xPico's reliability. For xPico Wi-Fi operation above +70° Celsuis, it is recommended that a heat pad be placed between the module and mating PCB.

Table 4-1 Absolute Maximum Ratings

Parameter	Symbol	Min	Max	Units
Supply Voltage	Vcc	0	3.6	Vdc
Operating Temperature		-40	85	°C
Storage Temperature		-40	85	°C

Table 4-2 xPico Wired Recommended Operating Conditions

Parameter	Symbol	Min	Typical	Max	Units
Supply Voltage	V _{CC}	3.15	3.3	3.46	Vdc
Supply Voltage Ripples	V _{CC_PP}			2	%
100 BaseTX Active (Normal CPU Speed)	I _{CC}		200		mA
10 BaseT Active (Normal CPU Speed)	I _{CC}		220		mA
No Link (Normal CPU Speed)	I _{CC}		150		mA
100 BaseTX Active (High CPU Speed)	I _{CC}		240		mA
10 BaseT Active (High CPU Speed)	I _{CC}		260		mA
No Link (High CPU Speed)	I _{CC}		190		mA
100 BaseTX Active (Low CPU Speed)	I _{CC}		170		mA
10 BaseT Active (Low CPU Speed)	I _{CC}		190		mA
No Link (Low CPU Speed)	I _{CC}		120		mA
Supply Reset Threshold	V _{RST}	2.7			Vdc
CPx Pull-ups, except CP5, CP6	R _{PU}	56		122	Kohm
CP5,CP6 Pull-up	R _{PU}		10		Kohm
CPx, RX Input Low Voltage	V _{CP_IL}			0.8	Vdc
CPx, RX Input High Voltage	V _{CP_IH}	2		5.5	Vdc
CPx, TX Output Low Voltage (I _{OL} = 4 mA)	V _{CP_OL}			0.4	Vdc
CPx, TX Output High Voltage (I _{OH} = -4 mA)	V _{CP_OH}	2.4			Vdc
Reset Pin Low Voltage	VRES_IL			0.36	Vdc
Reset Pin High Voltage	VRES_IL	2.0		3.46	Vdc

Table 4-3 xPico WiFi Recommended Operating Conditions

Parameter	Symbol	Min	Typical	Max	Units
Supply Voltage	V _{CC}	3.15	3.3	3.46	Vdc
Supply Voltage Ripples	V _{CC_PP}			2	%
TX Power @ 16.5dBm, 802.11b, 11Mbps	I _{CC}		330	380	mA
TX Power @ 15dBm, 802.11g, 6Mbps	I _{CC}		300	345	mA
TX Power @ 13dBm, 802.11g, 54Mbps	I _{CC}		255	295	mA
TX Power @ 14.5dBm, 802.11n, MCS0	I _{CC}		290	335	mA
TX Power @ 12dBm, 802.11n, MCS7	I _{CC}		230	265	mA
RX Power @ 802.11b, 11Mbps	I _{cc}		125	150	mA
RX Power @ 802.11g, 54Mbps	I _{cc}		125	150	mA
RX Power @ 802.11n, MCS7	I _{cc}		125	150	mA
Power Management State 1 @ 25°C	I _{CC}		6		μA
Power Management State 1 @ +85°C	I _{CC}		12		μA
Power Management State 1 @ -40°C	I _{CC}		5		μA
Supply Reset Threshold	V _{RST}				Vdc
CPx Pull-ups/ Pull-downs	R _{PU}	30	40	50	Kohm
CPx, RX Input Low Voltage	V _{CP_IL}	-0.3		0.75	Vdc
CPx, RX ⁽¹⁾ Input High Voltage	V _{CP_IH}	2		5.5	Vdc
CPx, TX Output Low Voltage (I _{OL} = 4 mA)	V _{CP_OL}			0.4	Vdc
CPx, TX Output High Voltage (I _{OH} = -4 mA)	V _{CP_OH}	2.4			Vdc
Reset Pin Low Voltage	VRES_IL	-0.3		0.8	Vdc
Reset Pin High Voltage	VRES_IL	2		Vcc+0.3	Vdc

Note 1. For xPico Wi-Fi 5V tolerant pins, in order to sustain a voltage higher than Vcc+0.3, the internal pull-up/pull-down resistors must be disabled.

Technical Specifications

Table 4-4 xPico Wired Technical Specification

Category	Description
CPU, Memory	Lantronix DSTni-EX 186 CPU, 256-Kbyte zero wait state SRAM, 512-Kbyte flash, 16-Kbyte boot ROM
Firmware	Upgradeable via TFTP and serial port
Reset Circuit	Internal 200ms power-up reset pulse. Power-drop reset triggered at 2.6V. External reset input causes an internal 200ms reset.
Serial Interface	CMOS (Asynchronous) 3.3V-level signals Rate is software selectable: 300 bps to 921600 bps
Serial Line Formats	Data bits: 7 or 8 Stop bits: 1 or 2 Parity: odd, even, none
Modem Control	DTR/DCD, CTS, RTS <- Serial 1 only
Flow Control	Serial 1: XON/XOFF (software), CTS/RTS (hardware) Serial 2: XON/XOFF (software)
Programmable I/O	8 PIO pins (software selectable), sink or source 4mA max.
Network Interface	10/100Mbps Ethernet, requires external magnetics and RJ45
Compatibility	Ethernet: Version 2.0/IEEE 802.3 (electrical), Ethernet II frame type
Protocols Supported	ARP, UDP/IP, TCP/IP, Telnet, ICMP, SNMP, DHCP, BOOTP, TFTP, Auto IP, SMTP, and HTTP
LEDs	Link, Activity, Link Speed, Duplex, System Status logic level outputs
Management	Internal web server, SNMP (read only) Serial login, Telnet login
Security	Password protection, locking features, optional Rijndael 256-bit encryption
Internal Web Server	Serves static Web pages and Java applets Storage capacity: 384 Kbytes
Weight	2.5 grams
Material	Metal shell
Temperature	Operating range: -40°C to +85°C (-40°F to 185°F)
Warranty	For details on the Lantronix warranty policy, go to our web site at www.lantronix.com/support/warranty .
Included Software	Windows [™] 98/NT/2000/XP-based Device Installer configuration software and Windows [™] -based Com Port Redirector
EMI Compliance	See A:Compliance.

Table 4-5 xPico Wi-Fi Technical Specification

Category	Description
CPU, Memory	Cortex M3 CPU, 1MB Flash, 128KB+4KB SRAM, Additional 1MB on board Flash
Firmware	Upgradeable via TFTP and serial port
WLAN Standards	802.11 b/g/n Wireless LAN with external antenna
Antenna Connector	U.FL connector for external antenna
Frequency Band	2.400Ghz to 2.484Ghz

Category	Description
Channel Support	Channel 1 to Channel 14
Modulation	DSSS, CCK, OFDM, BPSK, QPSK, 16QAM, 64QAM
Protocols Supported	ARP, UDP/IP, TCP/IP, Telnet, ICMP, SNMP, DHCP, BOOTP, TFTP, Auto IP, SMTP, and HTTP
Data Rates 802.11b	1, 2, 5.5, 11 Mbps
Data Rates 802.11g	6, 9, 12, 18, 24, 36, 48, 54 Mbps
Date Rates 802.11n	HT20 MCS0 (6.5Mbps) to HT20 MCS7 (65Mbps)
802.11b, CCK Mode Average Output Power	16.5 +/- 1.5dBm Typical @ 25C
802.11g, OFDM Mode Average Output Power	15 +/- 1.5dBm, Typical @ 25C, 6Mbps 13 +/- 1.5dBm, Typical @ 25C, 54Mbps
802.11n, OFDM Mode Average Output Power	14.5 +/- 1.5dBm, Typical @ 25C, MCS0 12 +/- 1.5dBm, Typical @ 25C, MCS7
802.11b Average Output EVM	IEEE Spec -10dBm
802.11g Average Output EVM	IEEE Spec, -5dB @ 6Mbps IEEE Spec, -25dB @ 54Mbps
802.11n Average Output EVM	IEEE Spec, -5dB @ MCS0 IEEE Spec, -28dB @ MCS7
802.11b, PER <8% RX Sensitivity @ 1Mbps	-93dBm Typical -89dBm Max
802.11b, PER <8% RX Sensitivity @ 11Mbps	-88dBm Typical -84dBm Max
802.11g, PER <10% RX Sensitivity @ 6Mbps	-87dBm Typical -83dBm Max
802.11g, PER <10% RX Sensitivity @ 54Mbps	-74dBm Typical -70dBm Max
802.11n, PER <10% RX Sensitivity @ MCS0	-87dBm Typical -83dBm Max
802.11n, PER <10% RX Sensitivity @ MCS7	-71dBm Typical -67dBm Max
Serial Interface	CMOS (Asynchronous) 3.3V-level signals Rate is software selectable: 300 bps to 921600 bps
Serial Line Formats	Data bits: 7 or 8 Stop bits: 1 or 2 Parity: odd, even, none
Modem Control	DTR/DCD, CTS, RTS <- Serial 1 only
Flow Control	Serial 1: XON/XOFF (software), CTS/RTS (hardware) Serial 2: XON/XOFF (software)
Programmable I/O	8 PIO pins (software selectable), sink or source 4mA max.
LEDs	WLAN Status, System Status logic level outputs
Management	Internal web server, SNMP (read only) Serial login, Telnet login
Security	Password protection, locking features, optional Rijndael 256-bit encryption
Internal Web Server	Serves static Web pages and Java applets Storage capacity: TBD Kbytes
Weight	2.5 grams
Material	Metal shell

Category	Description
Temperature	Operating range: -40°C to +85°C (-40°F to 185°F) with use of heat pad between module and mating PCB
Warranty	For details on the Lantronix warranty policy, go to our web site at www.lantronix.com/support/warranty .
Included Software	Windows [™] 98/NT/2000/XP-based Device Installer configuration software and Windows [™] -based Com Port Redirector
EMI Compliance	See A:Compliance.

A: Compliance (xPico Embedded Device Server)

(According to ISO/IEC Guide 22 and EN 45014)

Manufacturer's Name & Address:

Lantronix, Inc. 167 Technology Drive, Irvine, CA 92618 USA

Declares that the following product:

Product Name Model: xPico® Embedded Device Server

Conforms to the following standards or other normative documents:

Electromagnetic Emissions/Immunity:

Table A-1 Electromagnetic Emissions

Test Description	Specification	Test Method
Radiated Emissions	EN 55022:2010 Class B	CISPR 22:2008
Radiated Emissions	FCC 15.109(g):2012	ANSI C63.4:2009
	CISPR 22:1997 Class B	
Conducted Emissions	EN 55022:2010 Class B	CISPR 22:2008
Conducted Emissions	FCC 15.109(g):2012	ANSI C63.4:2009
	CISPR 22:1997 Class B	

Table A-2 Electromagnetic Immunity

Test Description	Specification	Test Method	Performance
			Criteria
ESD	EN 55024:2010	IEC 61000-4-2:2008	2
Radiated Immunity	EN 55024:2010	IEC 61000-4-3:2010	1
EFT	EN 55024:2010	IEC 61000-4-4:2004	1
		(Amended by A1:2010)	
Surge	EN 55024:2010	IEC 61000-4-5:2005	1
Conducted Immunity	EN 55024:2010	IEC 61000-4-6:2008	1
Magnetic Field Immunity	EN 55024:2010	IEC 61000-4-8:2009	1
Voltage Interruptions	EN 55024:2010	IEC 61000-4-11:2004	3
Voltage Dips	EN 55024:2010	IEC 61000-4-11:2004	1

Manufacturer's Contact:

Lantronix, Inc. 167 Technology Drive Irvine, CA 92618 USA Tel: (800) 526-8766

Tel: (949) 453-3990 Fax: (949) 453-3995

B: Compliance (xPico Wi-Fi Embedded Device Server)

(According to ISO/IEC Guide 22 and EN 45014)

Manufacturer's Name & Address:

Lantronix, Inc. 167 Technology Drive, Irvine, CA 92618 USA

Declares that the following product:

Product Name Model: xPico® Wi-Fi® Embedded Device Server Conforms to the following standards or other normative documents:

Country Wireless Certifications

Table B-1 Country Certifications

Country	Specification
USA FC	FCC Part 15, Subpart B, Class B
	ICES-003:2012 Issue 5, Class B
	ANSI C63.4-2009
USA	FCC Part 15, Subpart C (Section 15.247)
	ANSI C63.10-2009
	FCC Part 2 (Section 2.1091)
	FCC OET Bulletin 65, Supplement C (01-01)
	IEEE C95.1
Canada	Canada RSS-210 Issue 8 (2010-12)
	Canada RSS-Gen Issue 3 (2010-12)
	ANSI C63.10-2009
	RSS-102 Issue 4 (2010-12)
EU	EN 300 328 V1.8.1 (2012-06)
	EN 301 489-1 V1.9.2 (2011-09)
	EN 301 489-17 V2.2.1 (2012-09)
	EN 55022:2010+AC:2011, Class B
	EN62311:2008
Australia, New Zealand C11206	AS/NZS 4268: 2012
Japan	ARIB STD-T66, MIC notice 88 Appendix 43
	RCR STD-33, MIC notice 88 Appendix 44

Table B-2 Country Transmitter IDs

Country	Specification
USA FCC ID	R68XPICOW
Canada IC ID	3867A-XPICOW
Japan ID	201-135275

Table B-3 Safety

Country	Specification
World Wide € 0560	CB EN 60950-1:2006 + A11:2009 + A1:2010 + A12:2011 In accordance with the council directive 2006/95/EC
US, Canada	UL 60950-1 (2nd Edition)

Manufacturer's Contact:

Lantronix, Inc. 167 Technology Drive Irvine, CA 92618 USA Tel: (800) 526-8766

Tel: (949) 453-3990 Fax: (949) 453-3995

ROHS Notice

All Lantronix products in the following families are China RoHS-compliant and free of the following hazardous substances and elements:

Lead (Pb) Cadmium (Cd)

- Mercury (Hg) Hexavalent Chromium (Cr (VI))
- Polybrominated biphenyls (PBB) Polybrominated diphenyl ethers (PBDE)

Product Family Name	Toxic or hazardous Substances and Elements					
	Lead (Pb)	Mercury (Hg)	Cadmium (Cd)	Hexavalent Chromium (Cr (VI))	Polybrominated biphenyls (PBB)	Polybrominated diphenyl ethers (PBDE)
UDS1100 and 2100	0	0	0	0	0	0
EDS	0	0	0	0	0	0
MSS100	0	0	0	0	0	0
IntelliBox	0	0	0	0	0	0
xPress DR & sPress-DR+	0	0	0	0	0	0
SecureBox 1101 & 2101	0	0	0	0	0	0
WiBox	0	0	0	0	0	0
UBox	0	0	0	0	0	0
MatchPort	0	0	0	0	0	0
SLC	0	0	0	0	0	0
xPort	0	0	0	0	0	0
xPort Pro	0	0	0	0	0	0
WiPort	0	0	0	0	0	0
SLB	0	0	0	0	0	0
SLP	0	0	0	0	0	0
SCS	0	0	0	0	0	0
SLS	0	0	0	0	0	0
DSC	0	0	0	0	0	0
PremierWave	0	0	0	0	0	0
Micro125	0	0	0	0	0	0
xPico	0	0	0	0	0	0
xPico Wi-Fi	0	0	0	0	0	0
xPrintServer	0	0	0	0	0	0

O: toxic or hazardous substance contained in all of the homogeneous materials for this part is below the limit requirement in SJ/T11363-2006. X: toxic or hazardous substance contained in at least one of the homogeneous materials used for this part is above the limit requirement in SJ/T11363-2006.